



SAFETY AND OPERATING MANUAL
Portable Tool Cabinet with 4 drawers
PTC4D



ORIGINAL INSTRUCTIONS



PTC4D

TABLE OF CONTENTS

Welcome to Autojack!

Dear Customer, Congratulations on your purchase. Before using the product for the first time please be sure to read these instructions for use.

They provide you with all information necessary for using the product safely and to ensure its long service life.

Closely observe all safety information in these instructions!

Safety Instructions.....	01
Machine details.....	02
Assembly.....	03
Cleaning and Disposal of waste equipment.....	04
Autojack Guarantee.....	05

Safety Instructions

When using the equipment, a few safety precautions must be observed to avoid injuries and damage. Please read the complete operating instructions and safety regulations with due care. Keep this manual in a safe place, so that the information is available at all times. If you give the equipment to any other person, hand over these operating instructions and safety regulations as well. We cannot accept any liability for damage or accidents which arise due to a failure to follow these instructions and the safety instructions.

General Safety regulations

Read all safety regulations and instructions. Any errors made in following the safety regulations and instructions may result in an electric shock, fire and/or serious injury.

Keep all safety regulations and instructions in a safe place for future use.

Additional safety instructions:

- When loading and unloading the drawers, ensure that the tool trolley and the drawers are evenly loaded.
- Apply the break when loading and unloading.
- On slopes or uneven floors make sure that the tool trolley does not topple.
- When moving the trolley on slopes, hold it by the handle.
- Make sure that the maximum total load is not exceeded. (165 lbs/75 kg) Do not overload the drawers of the tool trolley.
- After transportation and/or assembly make sure that all drawer compartments are completely closed.

- For safety reasons the tool trolley is equipped with pull-out stops for the drawers. This prevents several drawers being opened at the same time.
- The tool trolley is very heavy when fully loaded. Improper opening can lead to tipping. Never open multiple drawers at the same time.
- Always push the tool trolley to avoid injury!
- Check for damage before use! Use the tool trolley only if it is in a faultless and safe operational condition.
- Any changes, modifications or additions to the trolley are prohibited.
- Any use of accessories or spare parts which are not expressly recommended by the manufacturer can result in injury or damage.
- Use only genuine accessories and spare parts.
- The tool trolley is not a toy! Do not climb or stand on.
- Store it in a location which is not accessible to children. The ideal storage temperature is between 10 and 30°C.
- If safe operation is no longer possible, decommission the product and protect it from accidental use. Safe operation is no longer guaranteed if the product:
 - has visible damage,
 - no longer working properly,
 - has been stored for an extended period under unfavourable environmental conditions,
 - was exposed to considerable transport loads.
- Have maintenance, adjustment and repair work carried out exclusively by a specialist or a specialist workshop.

MACHINE DETAILS

Machine Details

Specifications:

Max. Load capacity – 75kg
Dimensions – 616x330x760mm
Net Weight – approx. 17.8Kg


Package Contents:

- Tool trolley
- Handle
- 4 screws
- 2 wheels with brake
- 2 wheels without brake
- Manual


Also recommended accessory our NSL450
Non Slip draw liner.

Intended Use

- The tool trolley is designed for mobile storage of tools and small parts. It can be used indoors on a variety of (firm and flat) floor coverings.
- The equipment is to be used only for its described purpose. Any other use is deemed to be a case of misuse. The user/operator and not the manufacturer will be liable for any damage or injuries of any kind caused as a result of this.

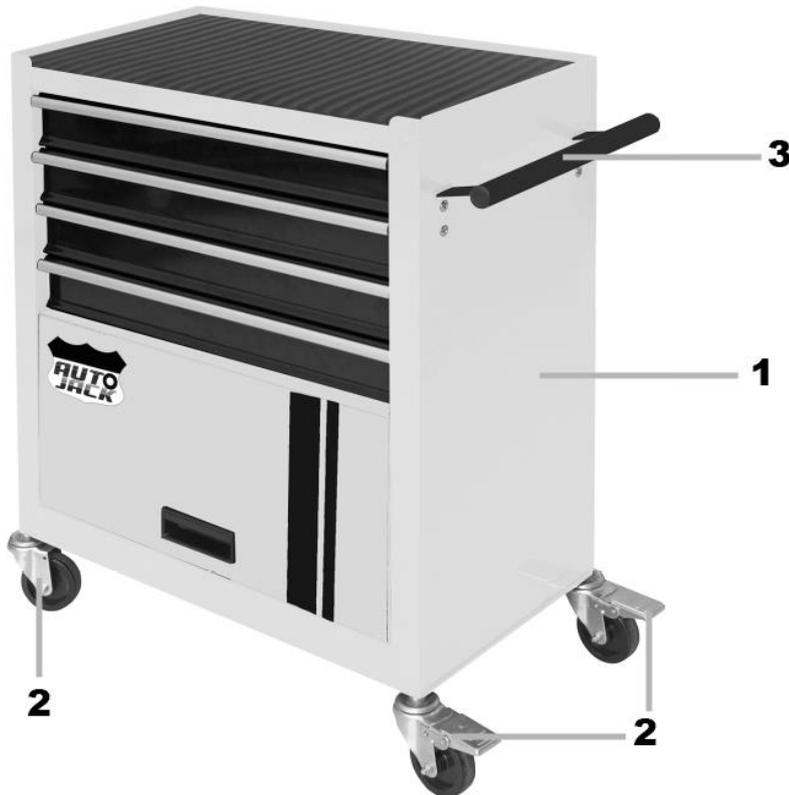

1. Tool trolley
2. Wheels
3. Handle

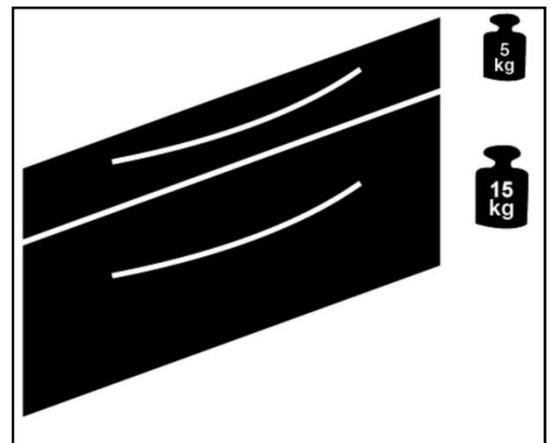

NOTE: Load capacity of the support area per drawer.

Assembly


Assembly

- Open the packaging and take out the equipment with care.
- Remove the packaging material and any packaging and/or transportation braces (if available).
- Check to see if all items are supplied.
- Inspect the equipment and accessories for transport damage.
- If possible, please keep the packaging until the end of the guarantee period.

Important! To avoid malfunctions, please note that all the drawers must be **completely** closed before you pull one out!


Fitting the handle

– Fit the handle (3) with the screws (a) as shown in Fig. 2.

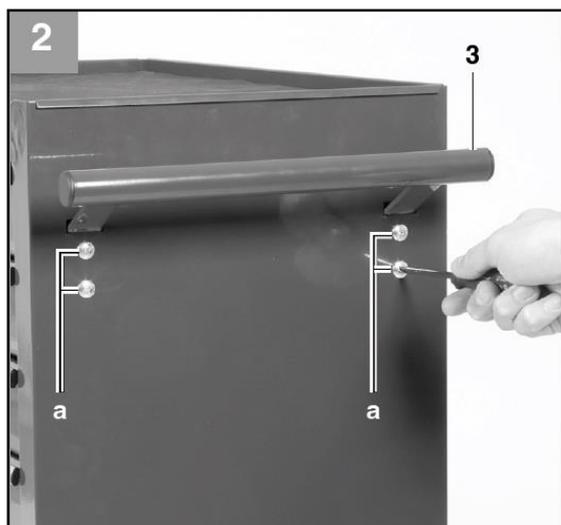


Fitting the wheels

– Fit the wheels (2) as shown in Fig. 3.

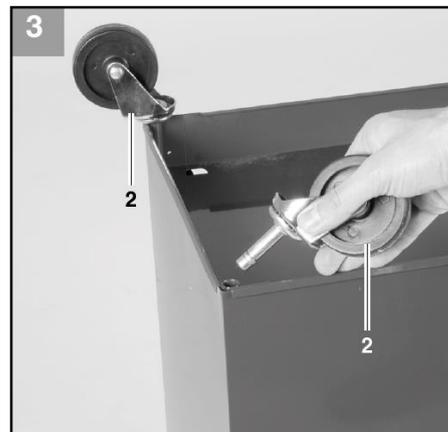

Before starting the equipment

– Unlock the drawers by pushing down the locking switch (4) located in the bottom drawer. (Fig. 4-5)

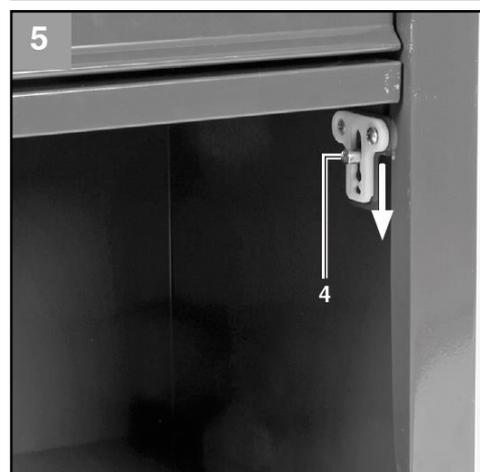

Cleaning and Disposal of waste equipment

Cleaning

– Clean the tool trolley with a slightly damp cloth and if necessary a small amount of conventional paint cleaner. To avoid damaging the surfaces do not use solvents or other aggressive or scouring cleaning products.

Disposal of waste equipment

– Equipment must be disposed of in accordance with the rules and regulations of the local waste disposal.

Use the provided for the disposal of electrical equipment collection points and enter your electrical and electronic equipment that you no longer use. They help ensure that the potential effects of incorrect disposal on the environment and human health to be avoided. So do your part to recycle, recycling and other forms of recovery of waste electrical and electronic equipment. Information on where the devices are disposed of, please contact your local authorities or local Governments.



Meaning of the "dustbin"
Protect our environment;
electrical appliances do
not belong in household
waste.

AUTOJACK GUARANTEE

1. Guarantee

1.1 Autojack guarantees that for a period of 12 months from the date of purchase the components of qualifying products (see clauses 1.2.1 to 1.2.8) will be free from defects caused by faulty construction or manufacture

1.2 During this period, Autojack, will repair or replace free of charge any parts which are proved to be faulty in accordance with paragraph 1.1 providing that:

1.2.1 You follow the claims procedure set out in clause 2.

1.2.2 Autojack and its Authorised Dealers are given reasonable opportunity after receiving notice of the claim to examine the product.

1.2.3 If asked to do so by Autojack or its Authorised Dealer, you return the product at your own cost to Autojack's or the supplying Authorised Dealer's Premises, For the examination to take place clearly stating the Returns Material Authorisation Number given by Autojack or an Authorised Dealer.

1.2.4 The fault in question is not caused by industrial use, accidental damage, fair wear and tear, wilful damage, neglect, incorrect electrical connection, misuse, alteration or repair of the product without approval.

1.2.5 The product has been used in a domestic environment only.

1.2.6 The fault does not relate to consumable items such as blades, bearings, drive belts or other wearing parts which can reasonably be expected to wear at different rates depending on usage.

1.2.7 The product has not been used for hire purposes.

1.2.8 The product has been purchased by you, as the guarantee is not transferable from a private sale.

2. Claims Procedure

2.1 In the first instance please contact the Authorised Dealer who supplied the product to you. In our experience many initial problems with machines that are thought to be fault due to faulty parts are actually solved by correct setting up or adjustment of the machine. A good Authorised Dealer should be able to resolve the majority of these issues much more quickly than processing a claim under the guarantee. If a return is requested by the Authorised Dealer or Autojack, you will be provided with a Returns Material Authorisation Number which must be clearly stated on the returned package, and any accompanying correspondence. Failure to provide a Returns Material Authorisation Number may result in item being refused delivery.



PTC4D

AUTOJACK GUARANTEE

2.2 Any issues with the product resulting in a potential claim under the guarantee must be reported to the Authorised Dealer from which it was purchased within 48 hours of receipt.

2.3 If the authorised Dealer who supplied the product to you has been unable to satisfy your query, any claims made under this guarantee should be made directly to Autojack. The claim itself should be made in a letter setting out the date and place of purchase, giving a brief explanation of the problem which has led to the claim. This letter should be then sent with proof of purchase to Autojack. If you include a contact number with this it will speed your claim up.

2.4 Please note that it is essential that the letter of claim reaches Autojack on the last day of this guarantee at the latest. Late claims will not be considered.

3. Limitation of Liability.

3.1 We only supply products for domestic and private use. You agree not to use the product for any commercial, business or resale purposes and we have no liability to you for any loss of profit, loss of business, business interruption or loss of business opportunity.

3.2 This guarantee does not confer any rights other than these expressly set out above and does not cover any claims for consequential loss or damage. This guarantee is offered as an extra benefit and does not affect your statutory rights as a consumer.

4. Notice

This guarantee applies to all product purchased from an Authorised Dealer of Autojack within the United Kingdom. Terms of guarantee may vary in other countries.



PTC4D

